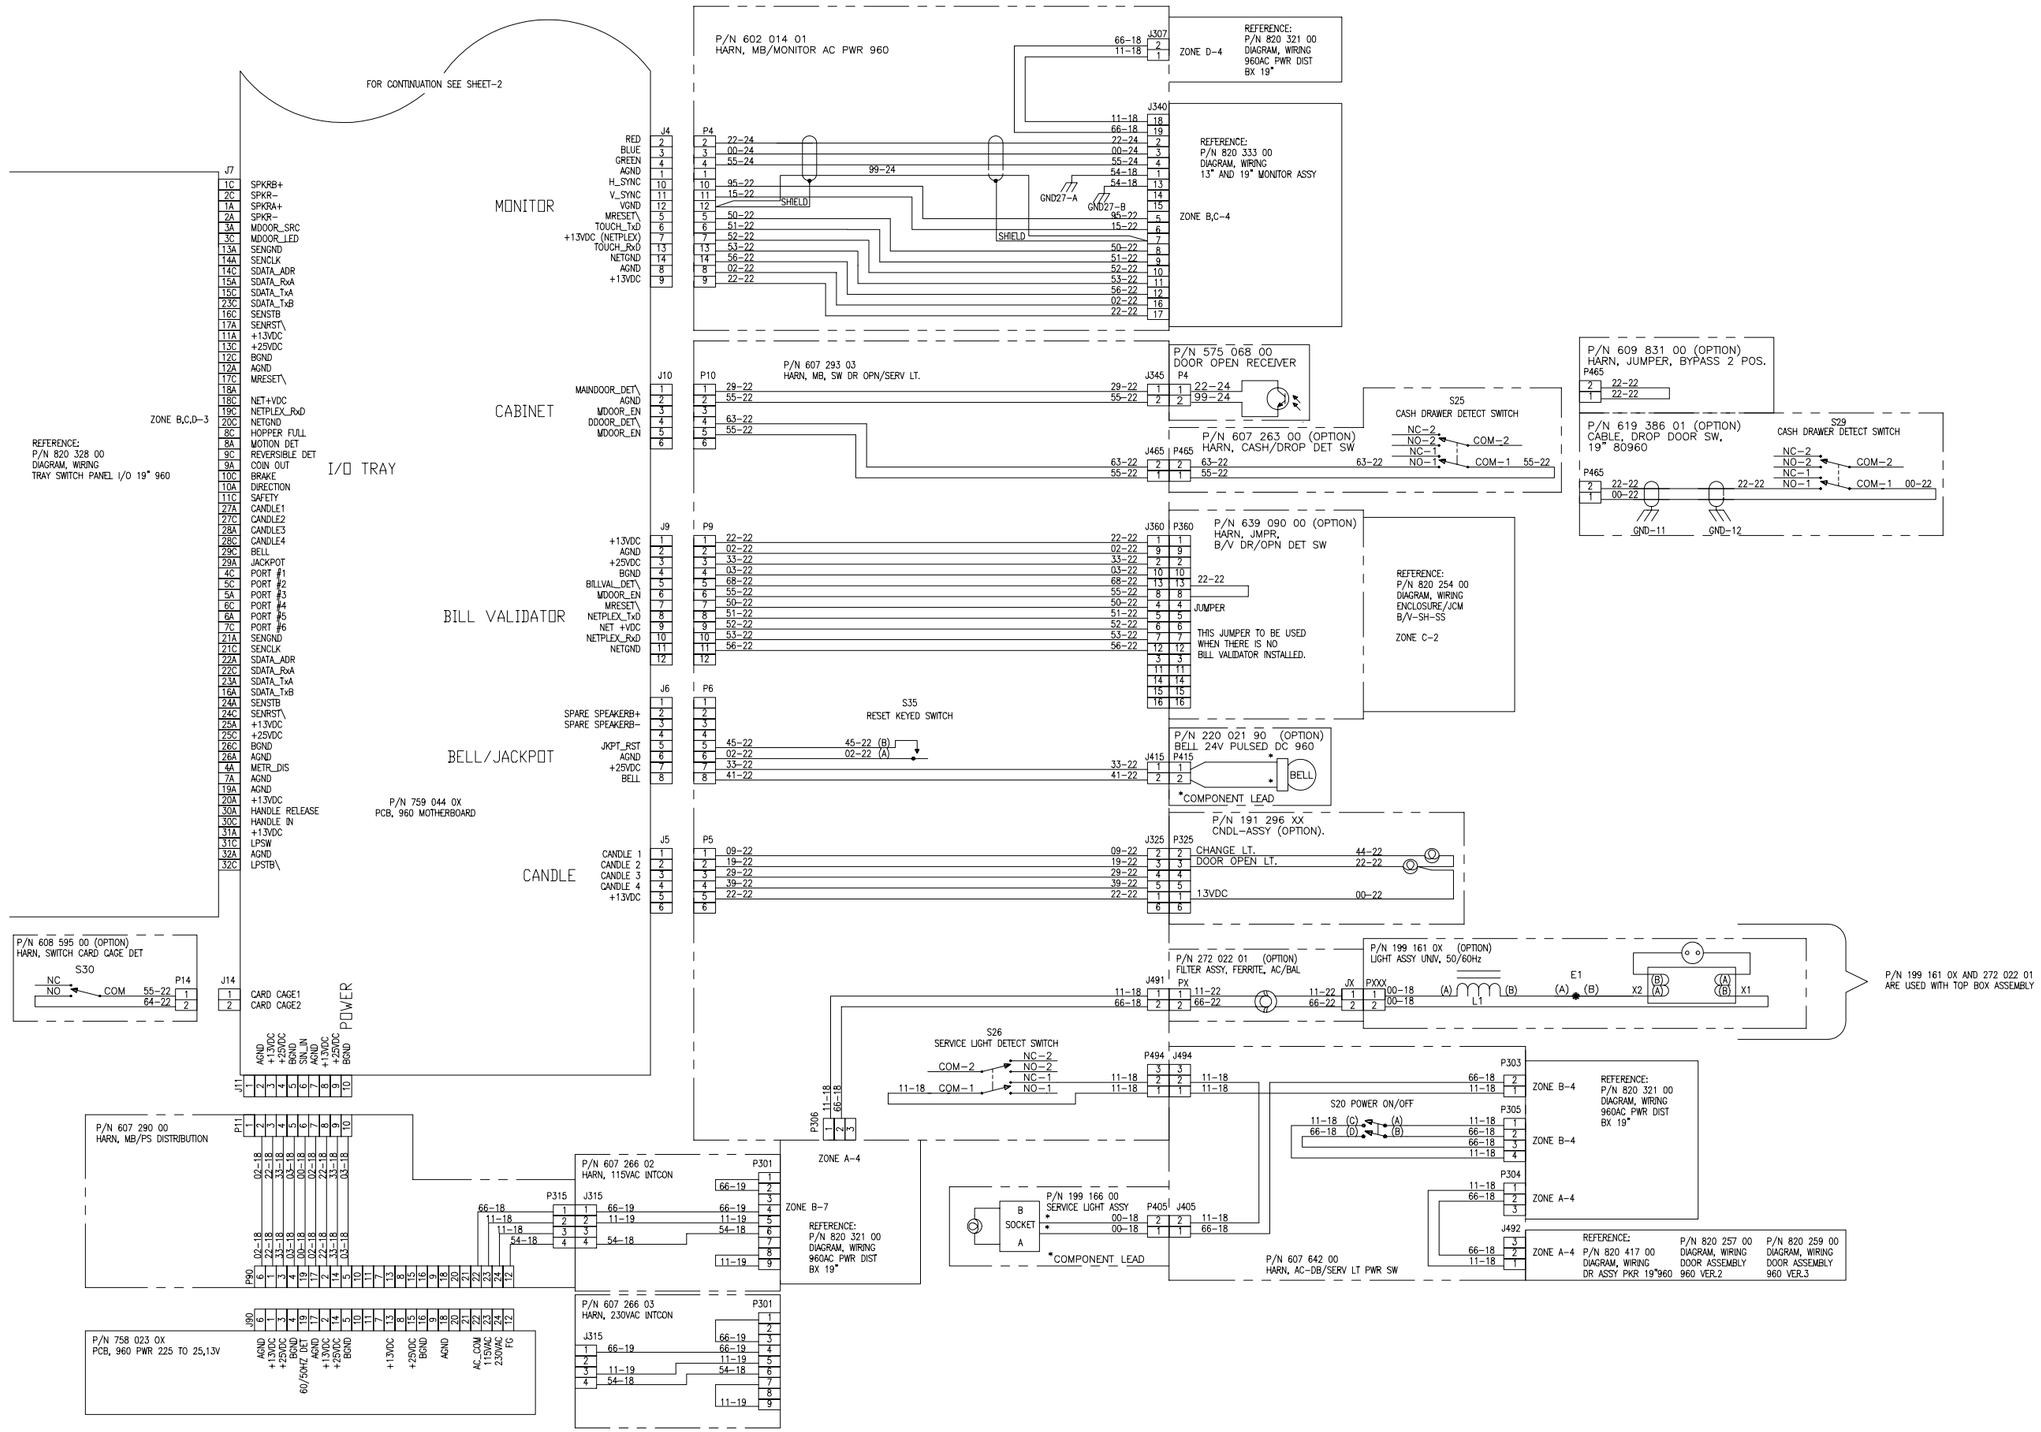
FOR CONTINUATION SEE SHEET-2
MONITOR
CABINET
I/O TRAY
BILL VALIDATOR
BELL/JACKPOT
CANDLE
POWER
P/N 759 044 0X
PCB, 960 MOTHERBOARD
REFERENCE:
P/N 820 328 00
DIAGRAM, WIRING
TRAY SWITCH PANEL I/O 19" 960
ZONE B,C,D-3
P/N 602 014 01
HARN, MB/MONITOR AC PWR 960
ZONE D-4
REFERENCE:
P/N 820 321 00
DIAGRAM, WIRING
960AC PWR DIST
BX 19"
REFERENCE:
P/N 820 333 00
DIAGRAM, WIRING
13" AND 19" MONITOR ASSY
ZONE B,C-4
P/N 607 293 03
HARN, MB, SW DR OPN/SERV LT.
P/N 575 068 00
DOOR OPEN RECEIVER
P/N 607 263 00 (OPTION)
HARN, CASH/DROP DET SW
S25
CASH DRAWER DETECT SWITCH
P/N 609 831 00 (OPTION)
HARN, JUMPER, BYPASS 2 POS.
P/N 619 386 01 (OPTION)
CABLE, DROP DOOR SW,
19" 80960
S29
CASH DRAWER DETECT SWITCH
P/N 639 090 00 (OPTION)
HARN, JMPR,
B/V DR/OPN DET SW
JUMPER
THIS JUMPER TO BE USED
WHEN THERE IS NO
BILL VALIDATOR INSTALLED.
REFERENCE:
P/N 820 254 00
DIAGRAM, WIRING
ENCLOSURE/JCM
B/V-SH-SS
ZONE C-2
S35
RESET KEYED SWITCH
P/N 220 021 90 (OPTION)
BELL 24V PULSED DC 960
BELL
*COMPONENT LEAD
P/N 191 296 XX
CNDL-ASSY (OPTION).
CHANGE LT.
DOOR OPEN LT.
P/N 608 595 00 (OPTION)
HARN, SWITCH CARD CAGE DET
S30
P/N 272 022 01 (OPTION)
FILTER ASSY, FERRITE, AC/BAL
P/N 199 161 0X (OPTION)
LIGHT ASSY UNIV, 50/60Hz
P/N 199 161 0X AND 272 022 01
ARE USED WITH TOP BOX ASSEMBLY
S26
SERVICE LIGHT DETECT SWITCH
S20 POWER ON/OFF
ZONE B-4
ZONE A-4
ZONE B-7
REFERENCE:
P/N 820 321 00
DIAGRAM, WIRING
960AC PWR DIST
BX 19"
P/N 607 290 00
HARN, MB/PS DISTRIBUTION
P/N 607 266 02
HARN, 115VAC INTCON
P/N 607 266 03
HARN, 230VAC INTCON
P/N 199 166 00
SERVICE LIGHT ASSY
P/N 607 642 00
HARN, AC-DB/SERV LT PWR SW
P/N 758 023 0X
PCB, 960 PWR 225 TO 25,13V
REFERENCE:
P/N 820 417 00
DIAGRAM, WIRING
DR ASSY PKR 19"960
P/N 820 257 00
DIAGRAM, WIRING
DOOR ASSEMBLY
960 VER.2
P/N 820 259 00
DIAGRAM, WIRING
DOOR ASSEMBLY
960 VER.3

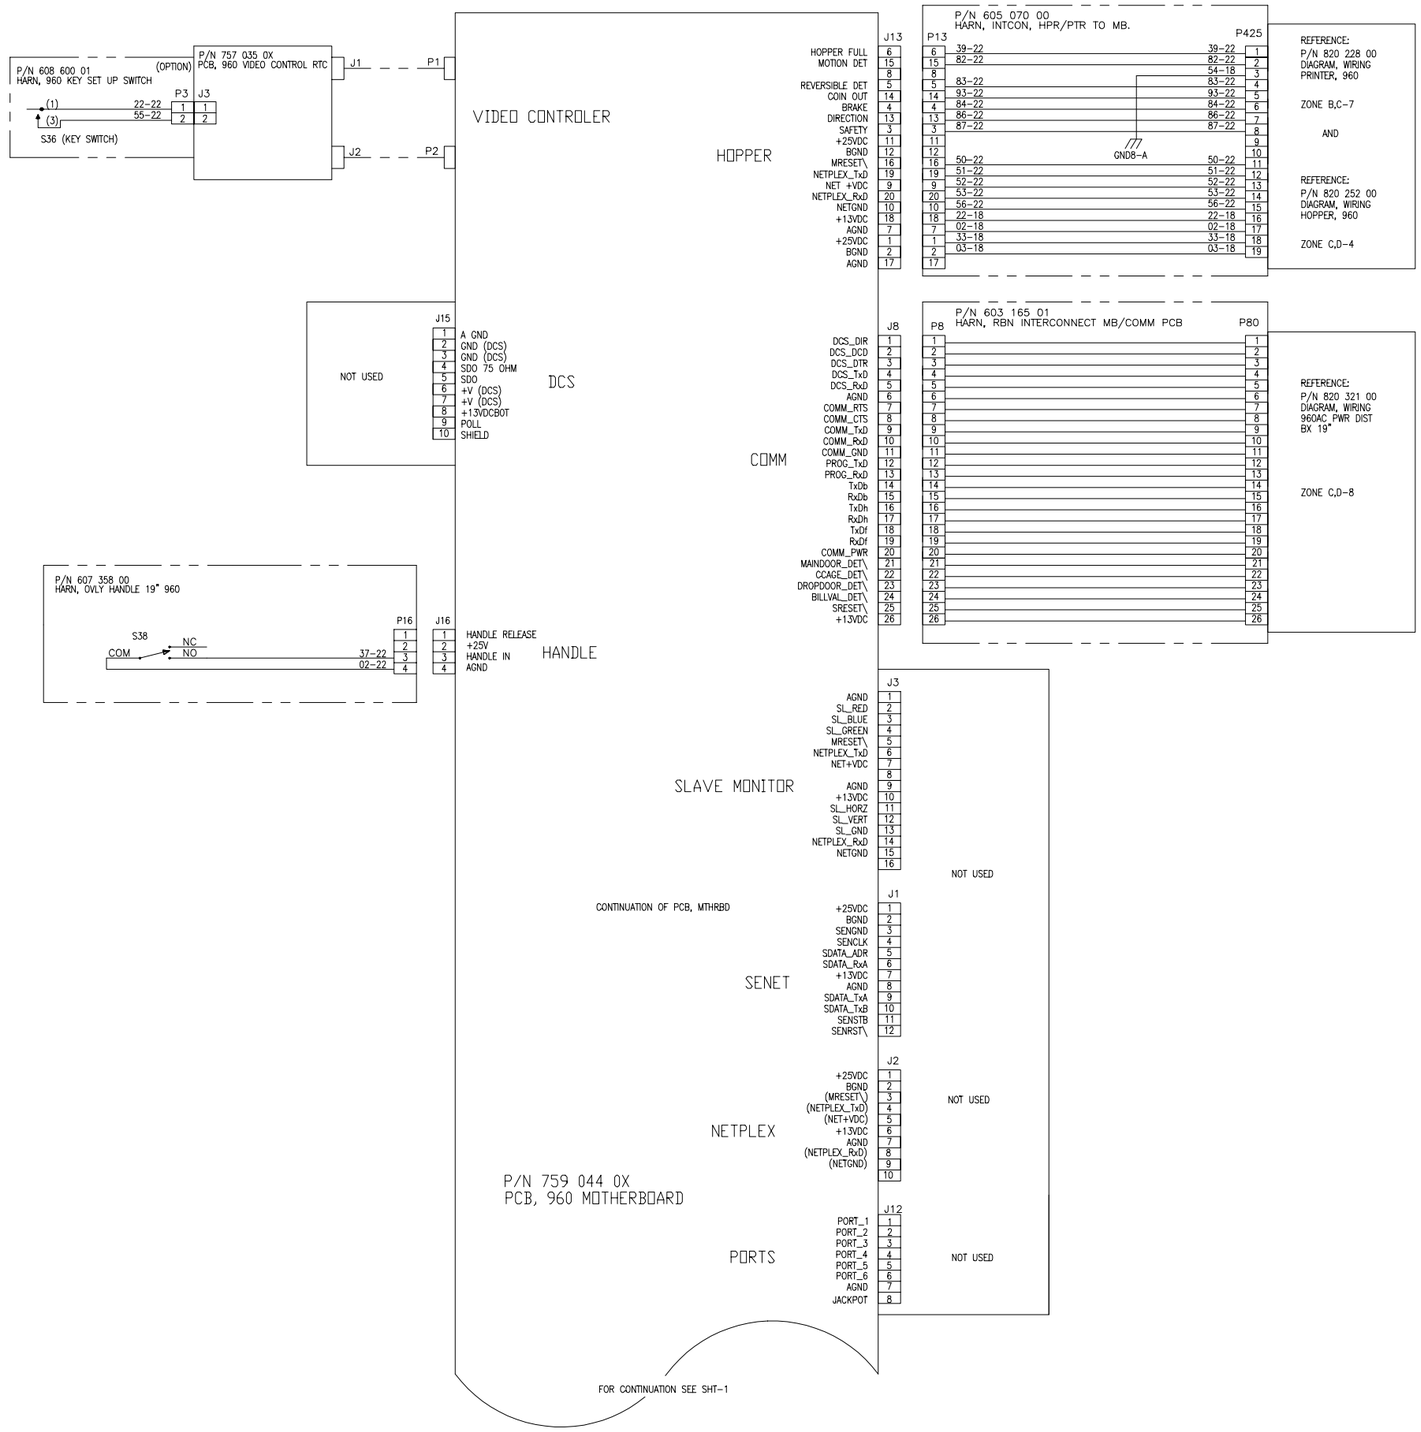
P/N 608 600 01
HARN, 960 KEY SET UP SWITCH
S36 (KEY SWITCH)
(OPTION)
P/N 757 035 0X
PCB, 960 VIDEO CONTROL RTC
VIDEO CONTROLER
HOPPER
P/N 605 070 00
HARN, INTCON, HPR/PTR TO MB.
REFERENCE:
P/N 820 228 00
DIAGRAM, WIRING
PRINTER, 960
ZONE B,C-7
AND
REFERENCE:
P/N 820 252 00
DIAGRAM, WIRING
HOPPER, 960
ZONE C,D-4
NOT USED
DCS
COMM
P/N 603 165 01
HARN, RBN INTERCONNECT MB/COMM PCB
REFERENCE:
P/N 820 321 00
DIAGRAM, WIRING
960AC PWR DIST
BX 19"
ZONE C,D-8
P/N 607 358 00
HARN, OVLY HANDLE 19" 960
HANDLE
SLAVE MONITOR
CONTINUATION OF PCB, MTHRBD
SENET
NETPLEX
P/N 759 044 0X
PCB, 960 MOTHERBOARD
PORTS
FOR CONTINUATION SEE SHT-1